



## Fuel Pressure Regulator


### REMOVAL & INSTALLATION

1. Relieve the fuel pressure from the system. Disconnect the negative battery cable.
2. Disengage the intake manifold vacuum hose from the pressure regulator.

Fig. 1: The pressure regulator is easily removed from the fuel rail — note that the rail usually does not have to be removed for this



Fig. 2: Always replace the O-ring for the fuel pressure regulator

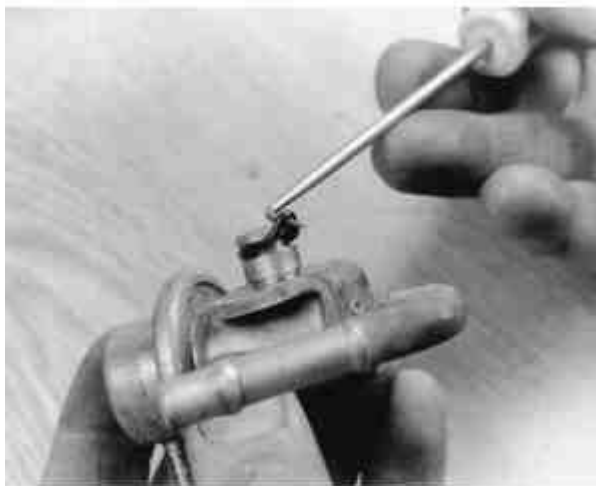

3. Remove the screws securing the pressure regulator assembly to the fuel tube.
4. Unfasten the hose clamps, then disconnect the pressure regulator from the fuel hose.

**NOTE: Place a rag under the fuel pipe to absorb any remaining fuel.**

5. Installation is the reverse of the removal procedure.
6. Start the engine, then check for fuel leaks around the pressure regulator mounting and fuel tube area.

