



## PEDAL FREE-PLAY

The free-play measurement is the total travel of the clutch pedal from the fully released position to where resistance is felt as the pedal is pushed downward.

Adjust the pedal free-play by loosening the pushrod lock-nut and turning the clevis. Free-play should be 0.039–0.059 in. (1.0–1.5mm).

